


Installation Method:

- The WLC-03 model requires 230V AC power to operate itself.
- To install the WLC-03 for a Single/Three Phase Pump with a DOL Relay-type starter, please refer to the following diagram.

Sensor Connection Method:

- Two sensors are provided with the WLC-03.
- Place the OH (Short Wire Length) sensor below the overflow level of the tank.
- Position the OL (Long Wire Length) sensor at the reserve level of the tank. (usually in the middle of the tank).
- Avoid installing the sensors in a way that direct water falls on them.

SINGLE PHASE / THREE PHASE DOL (DIRECT ON LINE) STARTER WIRING DIAGRAM

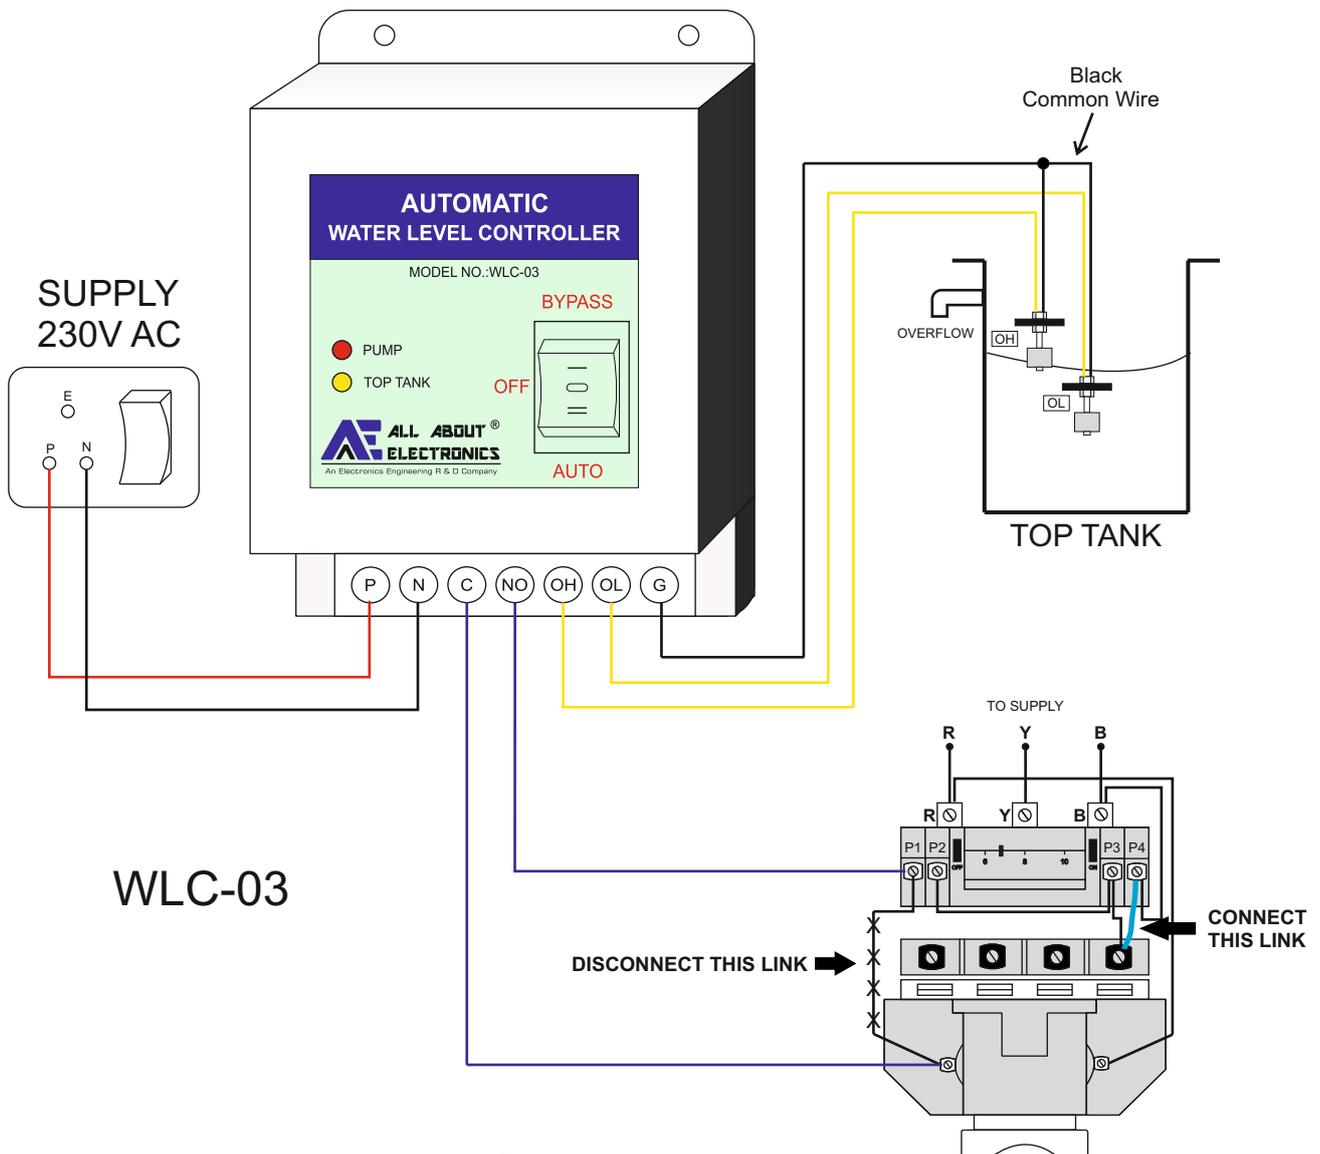

SINGLE PHASE OPEN WELL PUMP MCB STARTER WIRING DIAGRAM

